

## Advanced Caching Techniques

### Approaches to improving memory system performance

- eliminate memory accesses/operations
- decrease the number of misses
- decrease the miss penalty
- decrease the cache/memory access times
- hide memory latencies
- increase cache throughput
- increase memory bandwidth

New techniques address particular components of memory system performance

## Handling a Cache Miss the Old Way

- (1) Send the address & read operation to the next level of the hierarchy
- (2) Wait for the data to arrive**
- (3) Update the cache entry with data\*, rewrite the tag, turn the valid bit on, clear the dirty bit (if data cache)
- (4) Resend the memory address; this time there will be a hit.

\* There are variations:

- get data before replace the block
- send the requested word to the CPU as soon as it arrives at the cache (**early restart**)
- requested word is sent from memory first; then the rest of the block follows (**requested word first**)

How do the variations improve memory system performance?

## Non-blocking Caches

### **Non-blocking cache (lockup-free cache)**

- allows the CPU to continue executing instructions while a miss is handled
- some caches allow only 1 outstanding miss (“hit under miss”)
- some caches have multiple misses outstanding (“miss under miss”)
- **miss status holding registers (MSHR)**
  - hardware structure for tracking outstanding misses
    - physical address of the block
    - which word in the block
    - destination register number (if data)
    - mechanism to merge requests to the same block
    - mechanism to insure accesses to the same location execute in program order

## Non-blocking Caches

### **Non-blocking cache (lockup-free cache)**

- can be used with both in-order and out-of-order processors
  - **in-order processors** can execute when the next instruction is not the load consumer
  - **out-of-order processors** can execute instructions after the load consumer

How do non-blocking caches improve memory system performance?

## Non-blocking Caches

### *in-order processors*

```
lw $3, 100($4)
add $2, $3, $4
sub $5, $6, $7
```

in execution, cache miss  
consumer waits until the miss is satisfied  
independent instruction waits for the add

### *out-of-order processors*

```
lw $3, 100($4)
sub $5, $6, $7
add $2, $3, $4
```

in execution, cache miss  
*independent instruction can execute during the cache miss*  
consumer waits until the miss is satisfied

## Victim Cache

### **Victim cache**

- small fully-associative cache
  - contains the most recently replaced blocks of a direct-mapped L1 cache
  - if L1 cache miss & victim cache hit, swap the direct-mapped block and victim cache block
  - if both miss, L1 block goes to victim cache
- alternative to 2-way set-associative cache

How do victim caches improve memory system performance?

Why do victim caches work?

## Sub-block Placement

Divide a block into sub-blocks

tag	I	data	V	data	V	data	I	data
tag	I	data	V	data	V	data	V	data
tag	V	data	V	data	V	data	V	data
tag	I	data	I	data	I	data	I	data

- **sub-block** = unit of transfer on a cache miss
- **valid bit**/sub-block
- misses:
  - block-level miss: tags didn't match
  - sub-block-level miss: tags matched, valid bit was clear
- + the transfer time of a sub-block
- + fewer tags than if each block was the size of a subblock
- less implicit prefetching

How does sub-block placement improve memory system performance?

Spring 2012

CSE 471 - Advanced Caching  
Techniques

7

## Pipelined Cache Access

### **Pipelined cache access**

- simple 2-stage pipeline
  - access the cache
  - data transfer back to CPU
  - tag check & hit/miss logic with the shorter of the two stages

How do pipelined caches improve memory system performance?

Spring 2012


CSE 471 - Advanced Caching  
Techniques

8

## Trace Cache

Contains instructions from the *dynamic* instruction stream

- fetch statically noncontiguous instructions in a single cycle, called a **trace**
- limit on # basic blocks & # instructions in a trace

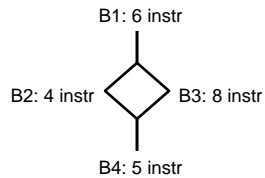

- instructions may appear more than once
  - accessed with PC & prediction bit
- traces can contain decoded instructions
  - particularly useful for CISC architectures

## Trace Cache

Advantages/disadvantages of a trace cache

+

-

-

Effect on memory system performance?

## Cache-friendly Compiler Optimizations

Exploit spatial locality

- **schedule for array misses**
  - hoist first load to each cache block

Improve spatial locality

- **group & transpose**
  - collects data from different vectors or structures that are accessed together & places them contiguously in memory
- **loop interchange**
  - so inner loop follows memory layout

Improve temporal locality

- **loop fusion**
  - put computations on the same portion of an array from separate loops into one loop
- **tiling (also called blocking)**
  - do all computation on a small block of an array that will fit in the cache

Spring 2012

CSE 471 - Advanced Caching  
Techniques

11

## Tiling Example

```
/* before */
for (i=0; i<n; i=i+1)
  for (j=0; j<n; j=j+1){
    r = 0;
    for (k=0; k<n; k=k+1) {
      r = r + y[i,k] * z[k,j]; }
    x[i,j] = r;
  };

/* after */
for (jj=0; jj<n; jj=jj+T)
for (kk=0; kk<n; kk=kk+T)

  for (i=0; i<n; i=i+1)
    for (j=jj; j<min(jj+T-1,n); j=j+1) {
      r = 0;
      for (k=kk; k<min(kk+T-1,n); k=k+1)
        {r = r + y[i,k] * z[k,j]; }
      x[i,j] = x[i,j] + r;
    };
```

Spring 2012


CSE 471 - Advanced Caching  
Techniques

12

## Memory Banks

### Interleaved memory:

- multiple memory banks
  - word locations are assigned across banks
  - **interleaving factor**: number of banks
  - send a single address to all banks at once

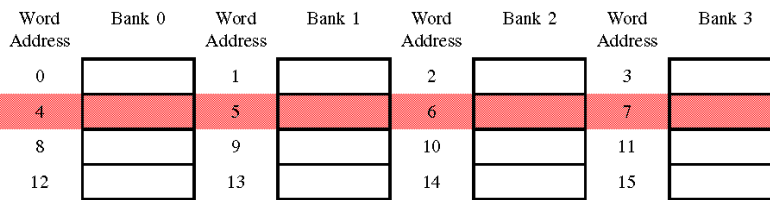

## Memory Banks

### Interleaved memory:

- + get more data for one transfer
  - data is probably used (*why?*)
- larger DRAM chip capacity means fewer banks
- power issue

Effect on memory system performance?

## Memory Banks

### **Independent memory banks**

- different banks can be accessed at once, with different addresses
- allows parallel access, possibly parallel data transfer
- multiple memory controllers & separate address lines, one for each access
  - different controllers cannot access the same bank
- less area than dual porting

Effect on memory system performance?

## Advanced Caching Techniques

### **Approaches to improving memory system performance**

- eliminate memory accesses
- decrease the number of misses
- decrease the miss penalty
- hide memory latencies
- increase cache throughput
- increase memory bandwidth



## Other Techniques

Hardware or compiler-based prefetching (decreases misses)

Coupling a write-through memory update policy with a write buffer (eliminates store ops/hides store latencies)

Merging requests to the same cache block in a non-blocking cache (hide miss penalty)

TLB (reduce page fault time (penalty))

Cache hierarchies (reduce miss penalty)

Virtual caches (reduce L1 cache access time)

Wider bus (increase bandwidth)